



Craven Equipment

Inspired by Adventure Built for Everyday

Bike – CB500 K0-K2 or CB750 K0-6

The correct rack for these bikes is a 'L2' rack

The fitting kit is designed to mount the rack to the motorcycle. A secondary kit will be required to hold panniers.

Included in the fitting kits:-

Main fitting kit

| Part Number | Quantity Description |
|-------------|--|
| P180 | 2 Support arm - Z shape |
| 41-0146 | 6 Distance piece - stainless steel |
| FA1477Q | 2 Set bolt, M8 x 25, stainless steel |
| FA1530Q | 8 Nyloc nut, M8, stainless |
| S19-3Q | 8 Plain washer, 5/16, stainless |
| FA1040Q | 6 Bolt, standard head, M8 x 30 (1-1/4"), stainless |
| B158 | 2 Straight leg, front |



Craven Equipment

Inspired by Adventure Built for Everyday

Pannier fitting kit

| Part Number | Quantity | Description |
|-------------|----------|------------------------------------|
| P437 | 2 | 7/8 tube clip |
| FA1477Q | 4 | Set bolt, M8 x 25, stainless steel |
| P457 | 1 | CB750 long support - Left hand |
| P458 | 1 | CB750 long support - right hand |
| FA1530Q | 4 | Nyloc nut, M8, stainless |
| S19-3Q | 4 | Plain washer, 5/16, stainless |

Fitting the rack:- Specific notes about your kit

Main kit

Remove the grab handle, indicators and dome nuts from top of the shock absorbers. Mount the two straight legs (B158 shown with the red arrow) to the top of the shock absorber, using the round hole rather than the slot, and tighten the original dome nut. Place the rack on the back of the bike, protect the bike with a jumper or cushion. It will also hold the rack roughly in place, unless you have a friend who can help. Using spacers and bolts mount the rack through the straight arms, tighten up. See Fig 1. Mount the Z bracket (P180 shown with the blue arrow) through hole left by the lifting handle and mount to the lower skate on the rack. Make the rack level and tighten all nuts. Re-attach the indicators through the rack on the diagonal, see Fig 2.

Pannier Kit

Attach the long support arms (P457 and P458) to the rack, tighten the nuts so they do not move. Take note that they are handed to clear the shock absorbers. Open the clamps up and wrap around the frame and tighten to the long support arm.

Fitting luggage :- See 'General Fitting instructions' for step-by-step advice for fitting a rack and panniers to any machine.



Craven Equipment

Inspired by Adventure Built for Everyday

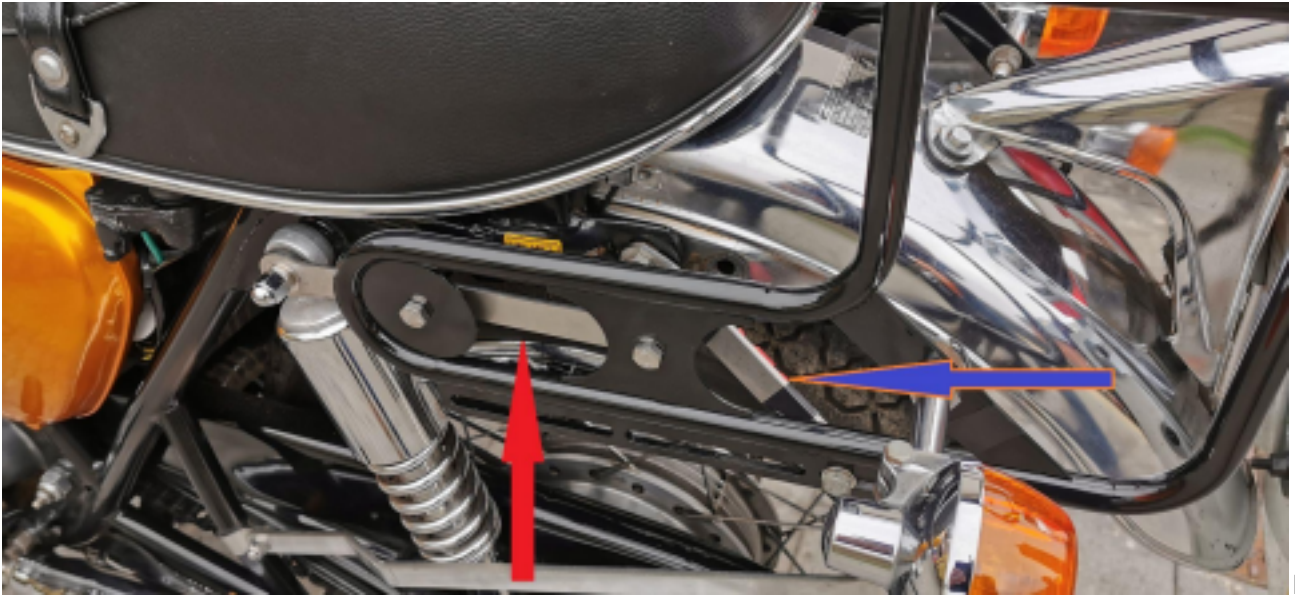


Fig 1



Fig 2



Craven Equipment

Inspired by Adventure Built for Everyday



Fig 3