



Craven Equipment

Inspired by Adventure Built for Everyday


Topbox Fitting Instructions

Tools required:

1x drill with 5mm drill bit
1x 8mm spanner

Step 1:

Top boxes do not need any extra parts, other than a rack, as they include all fittings necessary. Your kit should include all parts shown below

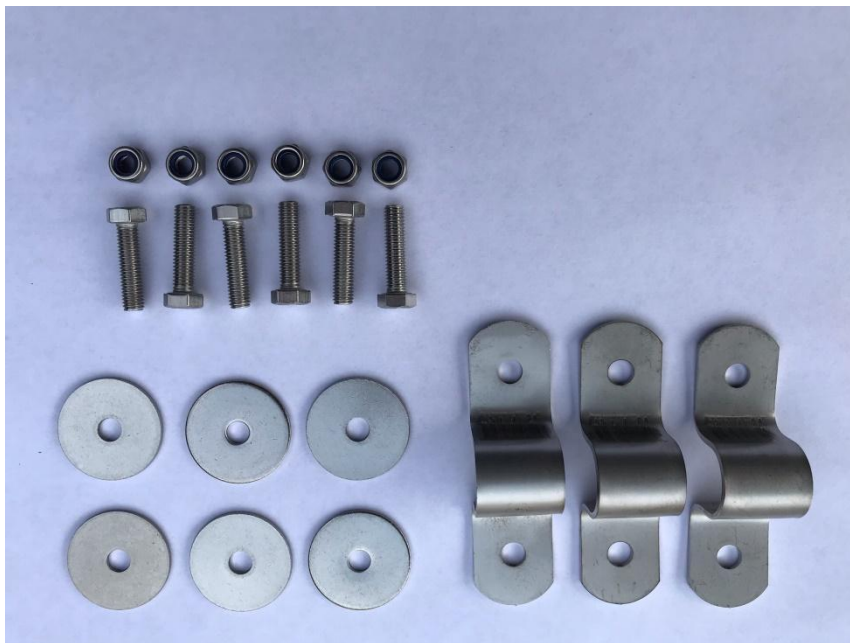



Craven Equipment

Inspired by Adventure Built for Everyday

Step 2:

Use a piece of masking tape to protect the topbox where you intend to drill. Then place the P299 backplate clip on the masking tape and, using a marker pen, mark the position of the holes through the clip.



Step 3:

The drill bit must be sharp as the glass fibre will blunt it fairly quickly. Once you are happy with the positioning drill the holes using a 5mm drill bit. Once all the holes are drilled you can place washers outside and in, positioning the clips before putting the lock nuts on. We recommend mounting the head of the bolt inside the box with the thread pointing out of the bottom so as not to catch on the items inside the box.

Our top boxes can be fitted not only to our racks but also other non-Craven racks too.