



Craven Equipment

Inspired by Adventure Built for Everyday

Bike – 2019+ Royal Enfield Interceptor

This bike does not use a luggage rack.

This fitting kit can only carry panniers, it has no topbox rack.

Part Number	Quantity	DESCRIPTION
B163	2	Grommet, blanking, indicator bracket
FA1029Q	4	Washer, half penny, M8, stainless
FA1042Q	2	Bolt, standard head, M8 x 45 (1-3/4"), stainless
FA1530Q	2	Nyloc nut, M8, stainless
P146	2	Top shock washer for Royal Enfield interceptor
P147	1	Rear indicator positioning bracket
P169	1	Royal enfield pannier rack bracket left hand
P170	1	Royal enfield pannier rack bracket right hand

Fitting kit

The rack is designed to fit under the seat and use the silencer bracket. The panniers bolt onto the rack using the long slots, see Fig 1.

Remove the 2 bolts on each side which are under the seat (standard fitment on the bike). On the left side one bolt will hold the side lifting handle, the other holds the shock. Remove the lifting handle and store safely somewhere, as it will foul the pannier so it is not reattached (the bike can be put on the stand using the rear grab handle). Remove the main silencer bolt. Fit the rack to each side of the bike with the flat piece "C E laser cut piece" at the top. Re-use the bolts that were fitted under the seat and use the longer bolt (provided) for the silencer bracket. Add the thick washer (P146) to the shock absorber mounting to prevent movement when the lifting handle is not fitted. A second of these washers is supplied for the other side so they match. Tighten all nuts / bolts.



Craven Equipment

Inspired by Adventure Built for Everyday

To fit indicator extension bracket -

Remove seat. Unbolt rear plastic mudguard (two bolts next to lock catch and two bolts under guard near tail light) This will expose the two bolts that hold on the tail light and indicator assembly. Disconnect the indicator and tail light connectors. Remove tail light, indicators and number plate bracket. Unbolt indicators from inside the tail light housing. Attach indicators to the stainless Craven bracket (see Figure 2). Attach Craven indicator bracket to existing number plate bracket.

Reassemble the number plate bracket, mudguard and seat.

Cut notch in rear light seal as shown in Fig 3.

Fit the blanking grommets into the old indicator holes.

Check indicators and brake lights function!

Fitting luggage :- to fit luggage, please see our 'General Fittings' sheet. Contact us if yours is missing.



Craven Equipment

Inspired by Adventure Built for Everyday




Fig 1



Craven Equipment

Inspired by Adventure Built for Everyday

Figure 2

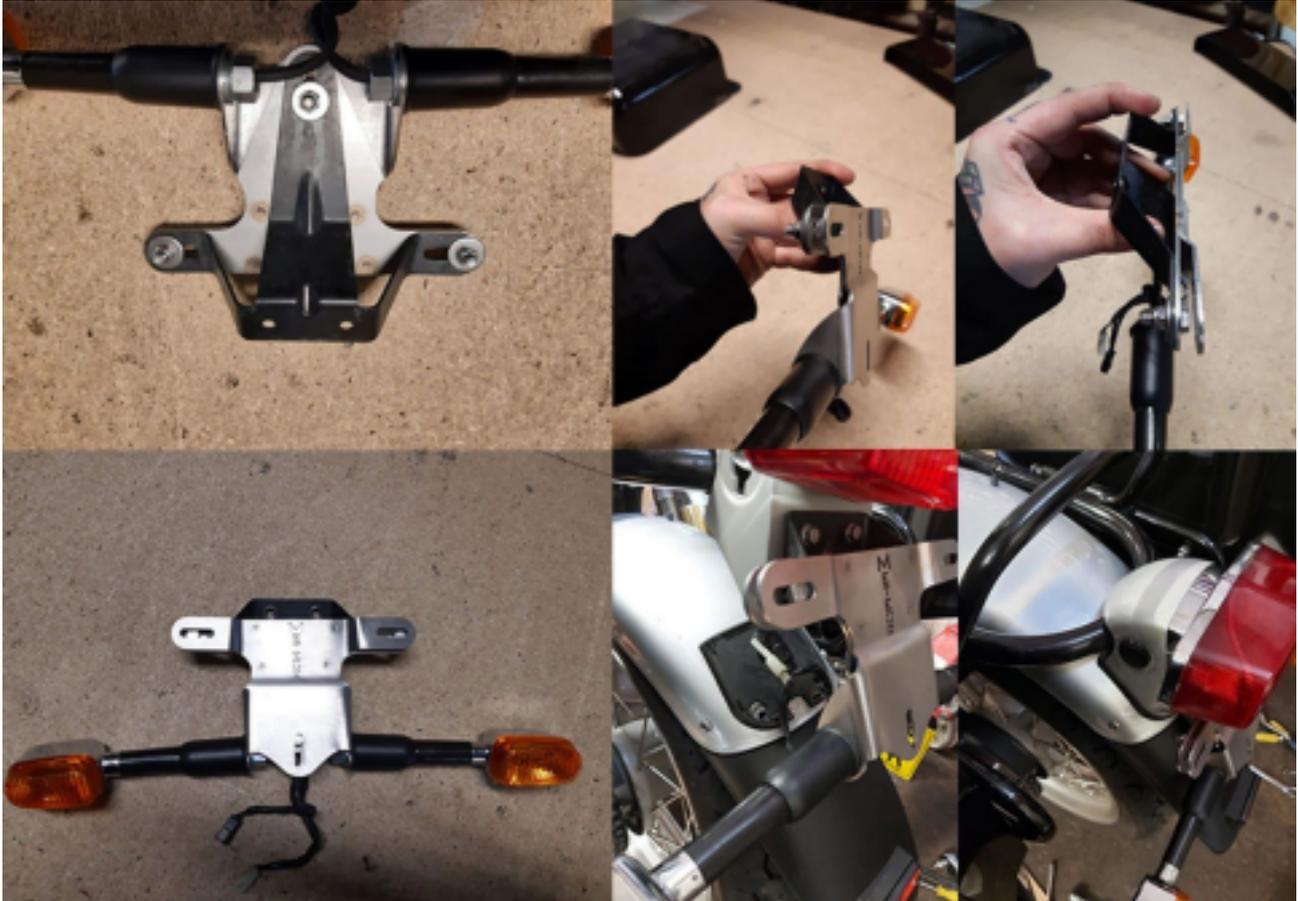



Craven Equipment

Inspired by Adventure Built for Everyday



Figure 3