



# Craven Equipment

Inspired by Adventure Built for Everyday

Bike – Velocette Mac

**The correct rack for these bikes is a ‘L2’ rack**

The fitting kit is designed to mount the rack to the motorcycle and also has the provision to hold panniers should you require it.

**Included in the fitting kit -**

Part Number	Quantity	Description
P497	1	Carrier arm Velocette Venom/Viper & Mac, left hand
P497A	1	Carrier arm Velocette Venom/Viper & Mac, right hand
P174	2	Z support
P175	2	Front support
41-0146	2	Distance piece - stainless steel
FA1477Q	2	Set bolt, M8 x 25, stainless steel
FA1530Q	8	Nyloc nut, M8, stainless
FA1476Q	4	Set bolt, M8 x 20, stainless steel
FA1029Q	8	Washer, half penny, M8, stainless
FA1046Q	2	Bolt, standard head, M8 x 75 (3"), stainless


**Fitting the rack:-**

Attach the long support arms to the pillion footrest bolts, tighten up. Attach the front supports (P175) to the back of the sliding shock absorber top mount. Attach the P174 Z brackets to the mudguard near to the long support arm. Now you are ready to fit the rack, the front supports require a spacer between them and the rack. Once fitted and level ensure all nuts are tight. See pictures below for more information.



# Craven Equipment

Inspired by Adventure Built for Everyday

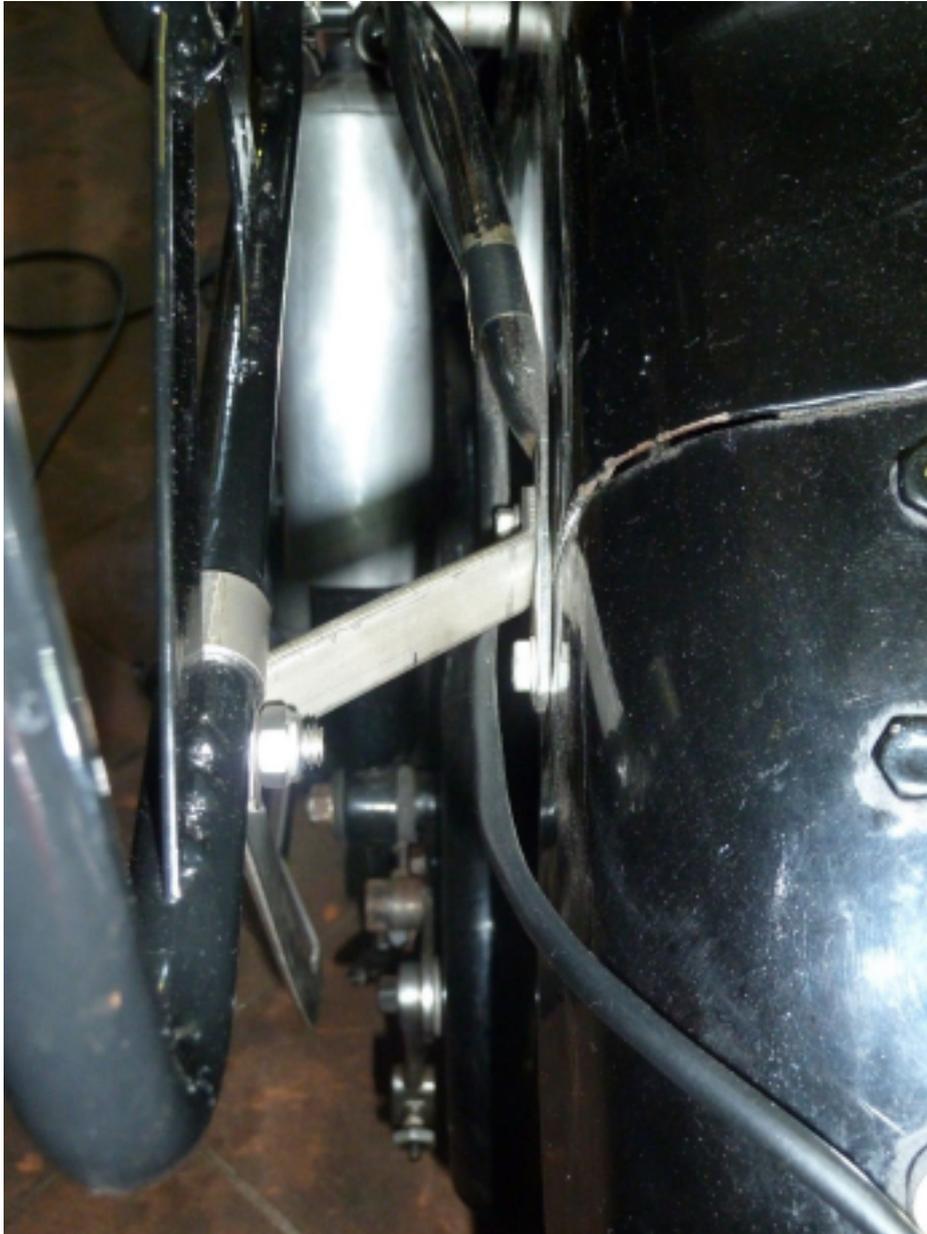

Please note that the tube clamp is no longer required as our racks now have a 'skate' on the bottom.



# Craven Equipment

Inspired by Adventure Built for Everyday





# Craven Equipment

Inspired by Adventure Built for Everyday



Please note that the tube clamp is no longer required as our racks now have a 'skate' on the bottom.

